

3000 Series Aluminum Landscape Edging Installation Instructions:

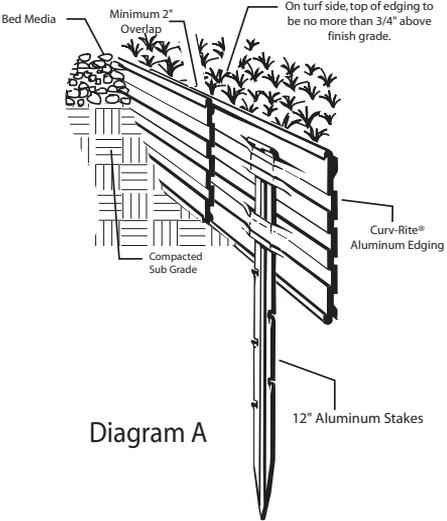


Diagram A

Tools:

Spade, Hacksaw, Hammer
 1. Lay strips of edging down in proximity of bed area to be defined by edging. (Note: Handle with reasonable care so that ends of edging are not damaged.)

2. Connect strips of edging by slipping the ends straight into each other with a **minimum of 2 inches of overlap.**

3. As edging strips are being connected, begin defining the bed area with the edging by standing edging up vertically on top of grade. (Note: twist and/or flex edging while moving to keep edging

from sliding apart.)

4. Adjust bed outline to suit keeping in mind the trench will be dug 6 to 12 inches offset from the edging.

5. Using a spade (or an edger/trencher) dig a trench 6 to 12 inches offset from the edging.


6. Position edging in trench such that top of **edging will be approximately 1/2" to 3/4" above final grade.**

7. At the end of the bed area, slide edging further together if there is only a little extra. If cutting is necessary, cut through entire piece of edging with a sharp hacksaw while supporting edging firmly on a flat surface.

8. Drive stakes down through stake pockets as shown above to permanently secure edging in place.

9. Fill in with finish grade and/or bed media along edging. Compact grade near edging such that finish grade is 1/2" below top of edging.

Diagram B

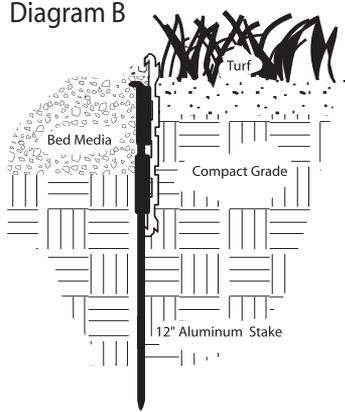

Copyright © 2010 Curv-Rite, Inc.